Haier

20" Core 2.0 Channel Soundbar with iPod®, iPhone®, and iPad® docking

User Manual
Guide de l'Utilisateur
Manual del Usuario Modelo
MODEL: SBC20

SMARTER LIFE BETTER PLANET

TABLE OF CONTENTS

PAGE

WARNING 2
IMPORTANT SAFETY INSTRUCTIONS 3
FCC WARNINGS 4
IN THE BOX 5
MAIN UNIT 6
REMOTE CONTROL 7
OPERATION 8-11
- POWER SUPPLY 8
- SLEEP TIMER SETTING 8
- HOW TO SET TIME 8
- CLOCK SYNC 8
- PLAYING YOUR iPod, iPhone, AND iPad 8
- FM RADIO 9
- TUNING THE FM RADIO 9
- STORING YOUR FAVORITE RADIO STATION 9
- MUTE THE UNIT 9
- VOLUME LEVEL ADJUSTMENT 9
- EQ EFFECT 9
- CLOCKRADIO 9-10
- MANUALLY DOWNLOADING THE CLOCKRADIO 9
- CLOCKRADIO 10
- ALARM 10
- SLEEP 10
- iPod 10
- RADIO 10
- EQ 10
- CONNECTING TO OTHER DEVICES 11
- AUX IN 11
- A/V INPUT 11
- COMPOSITE VIDEO OUTPUT 12
- COMPONENT VIDEO OUTPUT 12

TROUBLESHOOTING 13
LIMITED WARRANTY 14

WARNING

- CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
- CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.
- WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS DEVICE TO RAIN OR MOISTURE.
- WARNING: THE BATTERIES SHALL NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNLIGHT, FIRE OR THE SOMETHING SIMILAR.
- MAINS PLUG AND PLUG-IN ADAPTER REMAIN READILY OPERABLE DURING INTENDED USE. IN ORDER TO DISCONNECT THE APPARATUS, THE MAINS PLUG AND PLUG-IN ADAPTER SHOULD BE DISCONNECTED FROM THE MAINS SOCKET OUTLET COMPLETELY.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.	**CAUTION** **RISK OF ELECTRIC SHOCK DO NOT OPEN** **WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the device.

IMPORTANT SAFETY INSTRUCTIONS

1) Read these instructions.
2) Keep these instructions.
3) Heed all warnings.
4) Follow all instructions.
5) Do not use this apparatus near water.
6) Clean only with dry cloth.
7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10) Protect the power cord from being walked on or pinch particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11) Only use attachments/accessories specified by the manufacturer.
12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

S3125A

13) Unplug this apparatus during lightening storms or when unused for long periods of time.
14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15) This device shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.
16) Rating label is located at the bottom of enclosure.
17) "CAUTION" mark is located at the back of enclosure.

FCC WARNINGS

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IN THE BOX

Main Unit

Remote Control
(1 pc)



"AAA" Battery
(2 pcs)

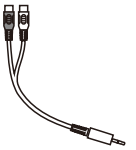

RCA Adaptor
(1 pc)

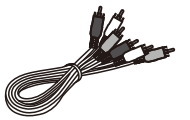

AV Cable
(1 pc)

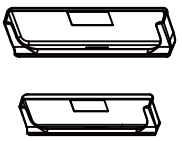

iPad 2 cradle
(2 pcs)

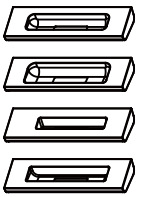

iPod & iPhone
bracket adaptor
(4 pcs)



Screw (2 pcs)
Anchor (2 pcs)

User Manual
(1 pc)

Wall mounting
illustration
(1 pc)

MAIN UNIT

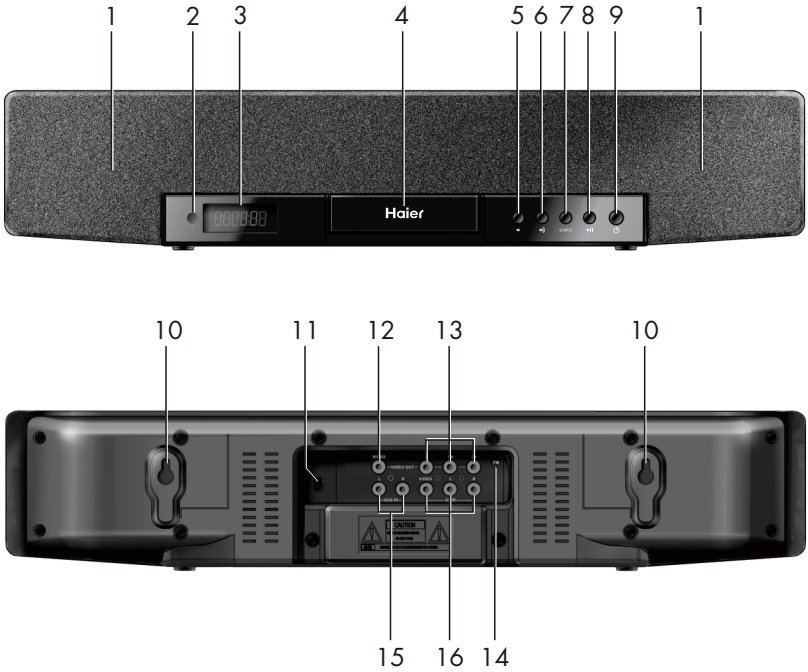

1. SPEAKERS
2. REMOTE SENSOR
3. LCD DISPLAY
4. iPod, iPhone, iPad DOCKING (Press to eject docking)
5. VOL - BUTTON
6. VOL + BUTTON
7. SOURCE BUTTON
8. PLAY/PAUSE BUTTON
9. STANDBY BUTTON
10. WALL-MOUNT HOLES
11. AC CORD
12. COMPOSITE VIDEO OUTPUT JACK
13. COMPONENT VIDEO OUTPUT JACKS
14. FM PIGTAIL ANTENNA
15. AUX IN JACKS
16. A/V INPUT JACKS

REMOTE CONTROL

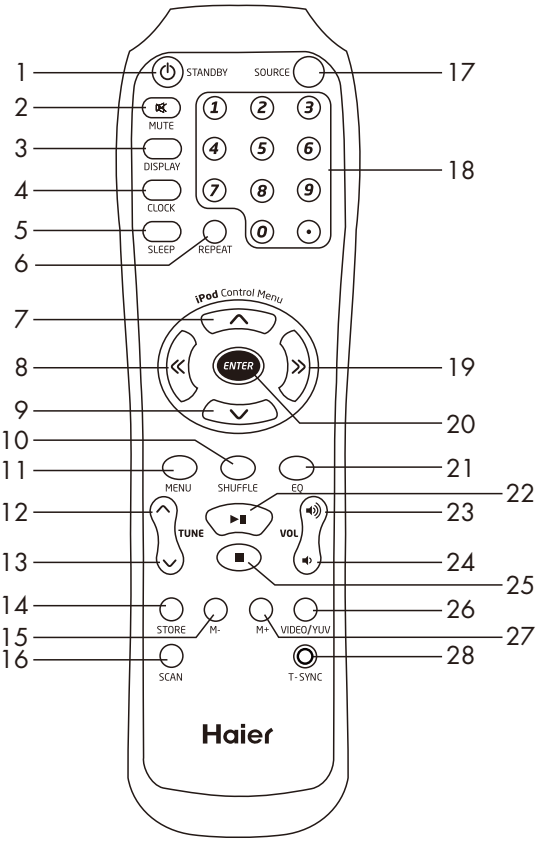

1. STANDBY BUTTON
2. MUTE BUTTON
3. DISPLAY BUTTON
4. CLOCK BUTTON
5. SLEEP BUTTON
6. REPEAT BUTTON
7. IPOD CONTROL MENU UP BUTTON
8. PREVIOUS & F.BWD BUTTON
9. IPOD CONTROL MENU DOWN BUTTON
10. SHUFFLE BUTTON
11. MENU BUTTON
12. TUNE UP BUTTON
13. TUNE DOWN BUTTON
14. STORE BUTTON
15. M - BUTTON
16. SCAN BUTTON
17. SOURCE BUTTON
18. NUMERIC BUTTONS
19. NEXT & F.FWD BUTTON
20. ENTER BUTTON
21. EQ BUTTON
22. PLAY/PAUSE BUTTON
23. VOL + BUTTON
24. VOL - BUTTON
25. STOP BUTTON
26. VIDEO/YUV BUTTON
27. M + BUTTON
28. T-SYNC BUTTON

OPERATION

POWER SUPPLY
Connect the AC cord to main power.

SLEEP TIMER SETTING
During playback, press SLEEP button repeatedly to select the sleep time until the desired sleep time showing on the LCD screen.
After finishing the sleep time setting, you can play the unit freely. Once the sleep time is expired, the unit will be switched off automatically.

HOW TO SET TIME
At standby mode, press CLOCK button once to light up the LCD screen; press CLOCK button twice, the Hour numbers will flash on the screen, use TUNE UP/DOWN button to adjust the hour and confirm the setting by pressing CLOCK button; After, the Minute numbers will start blinking on the screen, press TUNE UP/DOWN button to set the minutes accordingly, press CLOCK again to confirm the setting.
Note: The time can only be set at standby mode.

CLOCK SYNC
1. At iPod mode, clock synchronization starts automatically at the first docking when the unit has been connected to AC power supply. Subsequent to the first docking, it is necessary to press the T-SYNC button to conduct clock synchronization (The T-SYNC button only works at power on mode.).
2. At Tuner/iPod/Aux/AV mode, press DISPLAY button to check the current time.

PLAYING YOUR iPod, iPhone, AND iPad
1. Power on the unit. Dock an iPod, iPhone, iPad to the unit, and then press SOURCE button repeatedly to switch to iPod mode. The playback will start automatically.
2. Press PLAY/PAUSE button to start or pause the playback.
3. Press STOP button to stop the iPod/iPhone playback.
4. Press NEXT/PREVIOUS button to skip to the next track/ previous track.
5. Press and hold F.BWD/F.FWD button to search through the track forward/backward.
6. Press MENU button on the remote to return back to the iPod menu, press IPOD CONTROL MENU UP/DOWN buttons to select your desired track for playback. Confirm your selection by pressing ENTER button.
7. Press SHUFFLE button to enable or disable the shuffle function.
8. Press REPEAT button repeatedly to cycle through the repeat options (repeat 1, repeat album and repeat off).

FM RADIO

TUNING THE FM RADIO

1. Power on the unit, switch to TUNER(RADIO) mode by pressing the SOURCE button repeatedly.
2. Press SCAN button to auto scan and auto store radio stations to the memory. During searching radio stations, press STOP button to stop searching.
3. Press TUNE UP/DOWN button to fine tune the radio station. Press and hold TUNE UP/DOWN button to auto scan radio station forward or backward respectively (When an available station is found, the unit will broadcast it immediately and the searching will be stopped). During searching radio stations, press STOP button to stop searching.
4. At radio mode, it is possible to access the frequency via numeric buttons on the remote control. For example, press buttons 8, 9, point (.) and 8 to get to 89.8 MHz.

STORING YOUR FAVORITE RADIO STATION

1. At radio mode, press STORE button for storing the current station until memory cell number "P01" flashes on the screen.
2. Use M +/- button to select the corresponding memory cell among P01-P20 for storing the station.
3. Confirm your selection by pressing the STORE button.
4. During radio playback, press M+/- button repeatedly to recall the stored stations.

MUTE THE UNIT

During playback, press MUTE button to mute the audio. Press the button again to resume the audio.

VOLUME LEVEL ADJUSTMENT

Press VOLUME +/- button to adjust the volume output level.

EQ EFFECT

During playback, press EQ button repeatedly to cycle through the EQ options to the desired EQ effect.

CLOCKRADIO

MANUALLY DOWNLOADING THE APPS

1. When an Apple device is docked onto the unit. The Apps installation prompt will appear on the device screen.
2. Touch “YES” to download the Apps, touch “NO” to disregard the installation prompt. (Note: Make sure the Apple device has connected to Internet via 3G or WI-FI network).
3. To download the Apps (ClockRadio), just follow all installation procedures showed on the Apple device.

CLOCKRADIO

Touch the ClockRadio icon on the main menu of the iPhone or iPod Touch. The ClockRadio displays on the iPhone/iPod's screen with the information of your location, weather, time, calendar, etc and the following five icons on the bottom of the screen:

Remarks: To get more information about Haier ClockRadio App, please visit http://www.haieramerica.com/apps/#appsupport.

ALARM

Set the alarms as the following steps:

1. Enter the Alarm page by touching the Alarm icon on the screen.
2. Press "+" icon on the right top of the screen to enter Add Alarm page.
3. Setting alarm as the indication displays on the page.
4. Press "DONE" button to confirm your setting and return back to Alarm page.
5. After setting the alarm, touch "Edit" button on the right top of the screen to edit the alarm again.
6. On the Alarm page, touch the Alarm Switch on/off button to enable or disable the alarm.

When the alarm wakes up, you could set it to snooze or OFF mode.

SLEEP

1. Touch "SLEEP" icon to enter Sleep Time setting page.
2. Use finger to slide the minute scale on the screen for selecting the proper sleep time.
3. Touch "SAVE" button on the right top of the screen to save your setting.
4. Once the sleep time is expired, the unit will be switched off automatically.

iPod

Touch iPod icon to play the music on the docked iPod, iPhone, or iPad freely by touching the buttons on the screen. It is possible to press “+” button to select the desired songs for playback, confirm the selections by press 'DONE” button on the screen.

RADIO

1. Short touch TUNING UP/DOWN button to fine tune the radio station.
2. Long touch the TUNING UP/DOWN button to search the radio forward or backward automatically.
3. Press "MEM" icon to store the current radio station to the memory
4. Touch Favorite button to select the preset radio stations for broadcasting.

EQ

1. Touch the EQ icon on the iPhone/iPod's screen to enter the EQ effect setting page.
2. Select your desired EQ effect.
3. Touch "Save" button on the right top of the screen to save your setting.

CONNECTING TO OTHER DEVICES

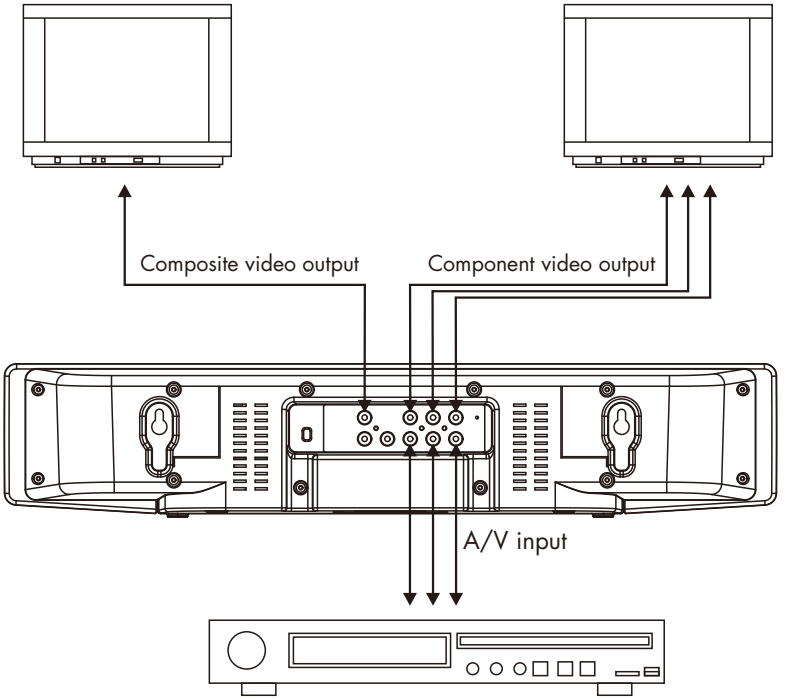

AUX IN

Follow below steps to connect the unit to another audio device like MP3 player and the like:

1. Connect the Audio Out of the device to AUX IN jacks with audio cable.
2. Press STANDBY button to turn the unit on.
3. Press SOURCE button repeatedly to switch the unit to AUX mode.
4. Power on the device and begin playback.

A/V INPUT

1. Connect the A/V jacks to audio&video source, for example, DVD player with an AV cable.
2. Press the STANDBY button to turn the unit on.
3. Press the SOURCE button repeatedly to switch to AV mode.
4. Use the native controls on the connected audio&video device to begin playing music through the connected the unit.
5. Audio input signal can only be completed through the Audio Right&Left Jacks of the A/V Jacks to the unit.

COMPOSITE VIDEO OUTPUT

1. Connect a RCA cable to the Composite Video Output jack on the unit and to a television.
2. Power on the TV set and the unit.
3. Adjust the connected television to the proper input setting.
4. Press VIDEO/YUV button repeatedly to switch between Composite and Component video output modes.
5. Video from a docked iPod, iPhone, iPad or a DVD player or the like devices can be connected can be passed through the device to the connected television.

Note: Make sure the docked iPod, iPhone or iPad's video out option is turned on.

COMPONENT VIDEO OUTPUT

The Component Video Output jacks only works in iPod, iPhone, and iPad docking mode. It cannot output video from the A/V input.

1. Connect a component video cable to the Component Video Output jacks and to the television.
2. Adjust the connected television to the proper input setting and make sure the docked iPod, iPhone, or iPad's video out option is turned on.
3. Press VIDEO/YUV button on the remote to switch to Component video output modes.
4. Video from a docked iPhone/iPod can now be played through the bar speaker to the connected television.

TROUBLESHOOTING

Symptom	Possible Cause	Solution
Radio sound distorted.	1. The station is not tuned in. 2. The signal is poor.	1. Fine tune the station. 2. Extend the FM pigtail antenna or change the direction of the antenna.
No radio sound.	1. The unit is not in tuner mode. 2. The volume has been muted or is on the minimum setting.	1. Press SOURCE button repeatedly until switching to tuner. 2. Adjust the volume level or press MUTE button to resume audio.
The iPod will not play.	1. The unit is not in iPod mode. 2. The iPod is not connected correctly.	1. Press SOURCE button repeatedly until switching to iPod. 2. Reconnect the iPod.
No iPod sound.	1. The unit is not in iPod mode. 2. The volume has been muted or is on the minimum setting.	1. Press SOURCE button repeatedly until switching to iPod. 2. Adjust the volume level or press MUTE button to resume audio.

LIMITED WARRANTY

This Haier brand product, when shipped in its original container will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective product with a new or remanufactured equivalent at to the purchaser, for parts or labor for the periods set forth below:

This warranty does not apply to the appearance of the product or the exterior of the product, which has been damaged or defaced, altered or modified in design or construction. It does not apply to the additional excluded items set forth below:

The warranty commences on the date the item was purchased and the original purchase receipt must be presented and the original purchase receipt must be presented to the authorized service center before warranty repairs are rendered.

The limited warranty described herein is in addition to whatever implied warranties may be granted to the purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(s) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Haier.

The warranties described herein shall be the sole and exclusive remedy available to the purchaser. Corrections of defects in the manner and for the period of time described herein, shall constitute complete fulfillment of all abilities and Responsibility of Haier to the purchaser with respect to the product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict duality or otherwise. In no event shall Haier be liable, or in any way responsible for any damages or defects in the product which were caused by repairs or attempted repairs performed by anyone other than an authorized service center or dealer; nor shall Haier be liable, or in any way responsible for incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so that above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Warranty period for this product: 1 year parts and labor.

Additional items excluded from warranty coverage: non-rechargeable batteries. Where to obtain service: For the location of the nearest Haier authorized service center or to obtain product literature, accessories, supplies or customer assistance, please call 1-877-337-3639.

What to do to obtain service: ship or carry in your product to an authorized service dealer or center. Be sure to have proof of purchase. If you ship the product, be sure it is packaged carefully.

Haier America
New York, NY 10018

IMPORTANT

Do Not Return This Product To The Store

If you have a problem with this product, please contact the "Haier Customer Satisfaction Center" at 1-877-337-3639.
DATED PROOF OF PURCHASE, MODEL # AND SERIAL # REQUIRED FOR WARRANTY SERVICE

IMPORTANT

Ne pas renvoyer cet appareil au magasin.

Si vous avez un problème avec cet appareil, veuillez contacter le service à la clientèle de Haier au 1-877-337-3639.
IL EST OBLIGATOIRE DE FOURNIR UNE PREUVE D'ACHAT DATÉE, LE NUMÉRO DU MODÈLE ET SON NUMÉRO DE SÉRIE AFIN DE BÉNÉFICIER DE LA COUVERTURE DE LA GARANTIE.

IMPORTANTE

No Devuelva Este Producto al Establecimiento Compra.

Si tiene problemas con este producto, por favor póngase en contacto con el "Centro Haier de Atención al Cliente" en el 1-877-337-3639.
PARA EL SERVICIO DE GARANTÍA SE REQUIERE PRUEBA DE COMPRA, FECHADA, No. DE MODELO Y No. DE SERIE

100-240 V, 50/60 Hz

Made in China
Fabriqué en Chine
Hecho en China

Haier

Haier America
New York, NY 10018

Printed in China

Model: SBC20
Issued Date: July, 2011
©2011 Haier America Trading, LLC.